

# CLONIX RADIO RECIEVER

## **CODING IN TRANSMITTERS** (At least first one must be done this way)

Place jumper J4 to off.

Press SW1 on receiver momentarily.

**A** Press hidden button on back of transmitter momentarily.



**B** Press button on front of transmitter, momentarily, that is to activate the gate.

Repeat A & B for as many transmitters as required.

Turn off power. } Or Leave for 20 Secs.  
Turn on power. }

Coding complete.

It is important that jumper J4 is left in the off position for the following coding procedure to work.


## **CODING IN ADDITIONAL TRANSMITTERS** (Without having to access panel)

You must be within normal receiving range of the system.

Momentarily press hidden button on back of transmitter already stored on system.

Momentarily press button on front of transmitter already stored on system.

**A** Press hidden button on back of new transmitter momentarily.

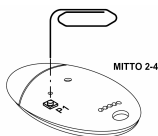

**B** Press button on front of new transmitter, momentarily, that is to activate the gate.

Repeat A & B for as many transmitters as are to be added to the system.

Turn off power. } Or Leave for 20 Secs.  
Turn on power. }

Coding complete.