


# WEEKLY PROGRAMMABLE ELECTRONIC TIMER

- Din Rail Installation
- Advanced pre-setting one week before
- Latest technology COMS quartz Mico-controller
- Digital electronic general purpose time switch with daily and weekly programs
- Repeat programs with 8 ON/OFF settings
- To the minute settings accuracy
- LCD displays real time to Hour/Minute and ON/AUTO/OFF

## TECHNCIAL DATA

- |                      |                             |                        |  |
|----------------------|-----------------------------|------------------------|--|
| ▪ Voltage limit:     | AC 180V ~<br>264V (50/60Hz) | ▪ Number of circuits:  | 1c                                       |
| ▪ Hysteresis:        | <2s/d (at 25 C)             | ▪ Load capacity:       | 16a 250VAC<br>(ohmic load cos 0 = 1)     |
| ▪ On/Off operations: | 8 on and 8 off              | ▪ Service life:        | Mechanically: 10/7<br>Electrically: 10/5 |
| ▪ Minimum Intervals: | 1 minute                    | ▪ Ambient temperature: | -10~55 C                                 |
| ▪ Weight :           | Approx 150g                 | ▪ Storage temperature: | -20 ~ 70 C                               |
| ▪ Display :          | LCD                         | ▪ Power consumption:   | 5VA                                      |
| ▪ Battery :          | 150 hours                   |                        |  |

## DIMENSIONS

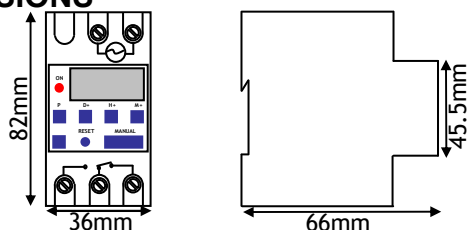

## OPERATING INSTRUCTION:

1. First time using this timer switch, please input the power and let battery recharge, then press reset key.
2. When first using the timer is will be in 24h mode. If you want to change to 12h mode please press '⊖' key for 5 seconds and LCD will display AM. If you want to re-change to 24h mode, press on '⊖' key for 5 seconds to return.
3. Programming:

Step	Key	Programming
1	Press <b>P</b>	Setting 1 ON time (display 1 on)
2*	Press <b>D+</b>	Select days of the week (If you want same set in every day, you need not press this key)
3	Press <b>H+/M+</b>	Set hours and minutes
4	Press <b>P</b>	Setting 1 off time (display 1 off)
5	Press <b>D+</b>	Select days of the week (If you want same set in every day, you need not press this key)
6	Press <b>H+/M+</b>	Set hours and minutes
7	Repeat step 2- 6	Set 2-8 on/off time
8**	Press ⊖	End

For cancelling engagements, press 'Manual', then '---' is displayed on the LCD to confirm cancellation

Press 'Manual' again to resume initial setting.

\*10 Different modes: (1. MO 2.TU 3.WE 4.TH 5.FR 6. SA 7. SU 8. MO TU WE TH FR 9. SA SU 10. MO TU WE TH FR SA SU

\*\* If you do not need 8 time setting press '⊖' key to the end

### 4. Clock Setting

- (1) Press '⊖' and D+ together until correct date is shown
- (2) Press '⊖' and H+ together until correct hour is shown
- (3) Press '⊖' and M+ together until correct minute is shown
- (4) Press 'Manual' key to display ON AUTO or AUTO OFF. (if this clock in your program is ON select ON AUTO and if this clock in your program is OFF select AUTO OFF)

5. If you always want to use the time switch ON or OFF then please press 'Manual' key to display 'ON' or 'OFF'